


Please read the user manual carefully before installation.



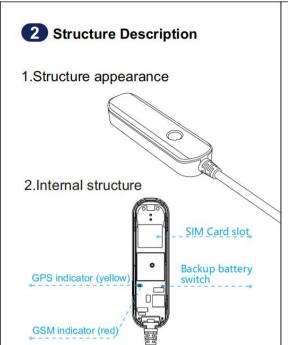


### Standard packing

 Item	Qty	Unit
Device	1	Unit
Power cable	1	Piece
User manual	1	Piece
Warranty card	1	Piece
	Device Power cable User manual	Device 1 Power cable 1 User manual 1

### Optional accessory

NO.	Item	Quantity	Unit
1	Relay	1	Piece

# Product interface definition and wire connection




#### Interface definition table

NO.	Color	Definition
1	Yellow	Connect to relay
2	Orange	ACC
3	Black	Negative pole
4	Red	Positive pole

# 3 Parameters and Functions

#### Parameter list

Item	Specifications
Voltage	DC 9V-90V
Current	25mA@12V(Quiescent current 10mA
Size	L83mm x W23mm x H12.5mm
Targeting	GPS
Positioning accuracy	Positioning accuracy <10m (This data is for reference only, which is measured by company laboratory, sometimes error is related to the terrain and the vehicle location)
Communication network	GPRS
Communication method	TCP/IP
Working temperature	-25°C-75°C
Light alarm	YES
Net weight	27g
Backup battery working time	0.5hour

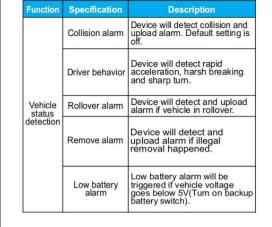

# 4 SMS Command Setting

1.Parameters checking SMS content: <CKWW>
2.Cut off oil&Recover oil setting
Cut off Oil:RELAY,1#
Recover Oil:RELAY,0#
3.Time zone setting GMT,E,6#

# 5 Installation instructions

①Equipment installation Check GPS appearance and accessories of the device.



②Install the SIM card Put the SIM card into the deck and confirm if the SIM Card

has internet access and call/sms services.





3Installation location

A. Keep dry and away from air conditioning vents. B. Avoid installation in long-term vibration areas.

C. Be away from radiation interference areas.



# 6 Trouble Shooting

Problem	Description	Solution
Weak signal	Unable to receive satellites properly	Take device to the open sky areas
	Low battery	Charge the battery
Unable to boot	Fuse blown	Replace the same specification fuse
	SIM card is in wrong position	Check SIM card
	Dirty SIM card	Wipe SIM card
Fail connect to the network	SIM card is damaged or invalid	Replace SIM card
	No GSM service	Move the device in GSM network area
	Weak singal	Move to open sky areas
Can not be charged	Poor connection	Check the power wire connection
Can not get GPS location	SIM card GPRS service failed	Contact the SIM Card supplier
GF3 location	SIM card arrears	Recharge fee
GPS	Wrong command	Send correct format SMS again
parameters setting failed	SMS no reply	Enable SMS service

#### Indicator status

Light type	Lamp status
GSM (red)	Fast flash: GSM initialization
	Slow flashing: GSM receiving signal normally
	Long light: GPRS online
	No light: no GSM signal received no SIM card inserted
GPS (yellow)	Fast flash: GPS signal search
	GPS located
	No light: GPS sleep/not at work

# 7 Access to Platform

Platform(www.wanwaygps.com)
 Android and IOS APP
 Scan the qr code to download app or search "wanwaytrack"



There are two methods to login in the platform or app.

- Login by IMEI number (the 15 digits in the back of the device),
- password: the last 6 digits of IMEI number.

  2. Contact the supplier to create an account for you.

# Warranty policy

#### Special statement

This product is subject to any technical change without prior notice.

Product appearance and color are subject to the actual product.

#### Replacement policy

For defects devices not damaged by human factors, we will replace a new one, if it corresponds to our warranty policy.

#### .....

#### Customers Data

Customers Name	Telephone
Address	
Model Type	IMEI number
Purchase Data	Invoice No
Company Address	**

**Warranty Card** 

Please keep the warranty card carefully